




HOB USER INSTRUCTION

SWITCH – ON LEFT HAND SIDE WALL

Table of contents				
Safety information	4	Technical Data	11	
Product description	6	Electrical connection	12	
Daily use	7	Electrical connection for	13	Austr
Maintenance and cleaning	9	Environmental concerns	13	
What to do if	10	IKEA GUARANTEE	14	

Safety	Information
Your safety and that of others is paramount. This manual and the appliance itself provide important safety - warnings, to be read and observed at all times.	improper use of the appliance. Please observe the following instructions: The appliance must be disconnected from the power supply before carrying out any installation work.
 This is the safety alert symbol, pertaining to safety, which alerts users to potential hazards to themselves and others.	Installation and maintenance must be carried out by a qualified technician, in compliance with the manufacturer's instructions and local safety regulations.
All safety messages are preceded by the safety alert symbol and the following terms:	Do not repair or replace any part of the appliance unless specifically stated in the user manual.
 DANGER Indicates a hazardous situation which, if not avoided, will result in serious injury.	- Regulations require that the appliance is earthed.
 WARNING Indicates a hazardous situation which, if not avoided, could result in serious injury.	The power cable must be long enough for connecting the appliance, once fitted in its housing, to the power supply.
All safety warnings give specific details of the potential risk present and indicate how to reduce risk of injury, damage and electric shock resulting from	- For installation to comply with current safety regulations, an all-pole disconnect switch with minimum contact gap of 3 mm

must be utilized.

- Do not use multiple plug adapters or extension leads.
- Do not pull the power cable to disconnect it from the electrical supply.
- The electrical components must not be accessible to the user after installation.
- The appliance is designed solely for household use for cooking food. No other type of use is permitted (e.g. heating rooms). The Manufacturer declines all responsibility for inappropriate use or incorrect setting of the controls.
- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of

the appliance in a safe way and understand the hazards involved. They shall not play with the appliance. Cleaning and user maintenance shall not be made by children supervision.

The accessible parts of the appliance may become very hot during use. Keep children away from the appliance and supervise them to ensure that they do not play with it.

- During and after use, do not touch the heating elements of the appliance. Do not allow the appliance to come into contact with cloths or other flammable materials until all the components have cooled sufficiently.

- Do not place flammable material on or near the appliance.


- Overheated oils and fats catch fire easily. Never leave the appliance unattended when cooking with fat and oil.

- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.

- A separator panel (not supplied) must be installed in


- the space under the appliance Do not use steam cleaners. at a distance at least 20mm.- Unattended cooking on a If an Ikea separator is used, hob with fat or oil can be follow the instructions given indangerous and may result in the panel reference material. fire. NEVER try to extinguish a No separator is needed if an fire with water, but switch off oven is installed underneath. the appliance and then cover flame e.g. with a lid or a fire blanket.
- If you don't install the oven separator and between the Danger of fire: do not store separator and the cabinet you items on the cooking surfaces. must install the drawer. - After use, switch off the hob element by its control and do not rely on the pan detector.
 - If the surface is cracked, switch off the appliance to avoid the possibility of electric shock. - The instructions for hobs incorporating halogen lamps shall warn the user not to stare at the hob elements.
 - The appliance is not intended to be operated by means of an external timer or separate remote control system.

Product description

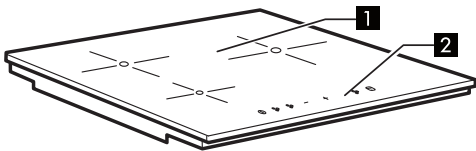

- 1 Induction cooking zone
- 2 Control panel

Control panel

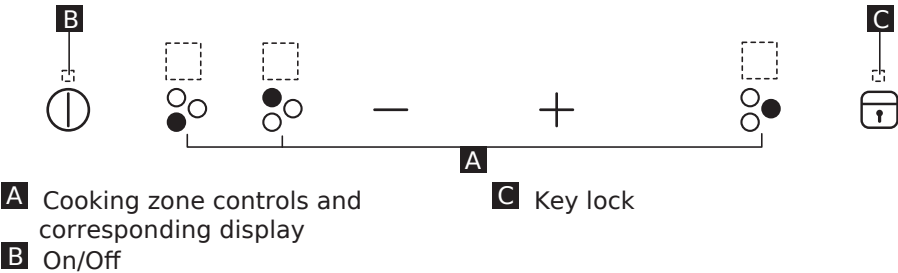

- A Cooking zone controls and corresponding display
- B On/Off
- C Key lock

Daily use

Switching the hob ON/OFF Switching on and adjusting

To switch the hob on, press the button for approx. 2 seconds until the cooking zone displays light up. To switch off, press the same button until the displays switch off. AU:

Power indicator display

Selected cooking zone indication

the cooking zones are deactivated.
If the hob has been in use, the residual heat indicator "H" remains lit until the cooking zones have cooled down.

Cooking zone positioning

If within 10 seconds of switching on, no function is selected, the hob switches off automatically.

Once the hob is switched on and the pan is positioned on the chosen cooking zone, select the zone using the corresponding button: the display shows level 0.

Before use

Important: The induction cooking zones will not switch on if pots and pans are not of the correct dimensions.
Each cooking zone has various power levels, adjustable with the +/- buttons, going from "1": min. power, to "9": max. power.

Only use pots bearing the symbol "INDUCTION SYSTEM".

Demo Mode

Before switching the hob on, position the pot on the desired cooking zone.

This hob is equipped with a demo mode which allows you to interact with the control panel without activating the corresponding cooking zones.

Existing pots and pans:

Use a magnet to check whether pots or pans are suitable for use on the induction hob: pots are unsuitable if they cannot be magnetically detected.
The activation and deactivation procedure must be carried out within 60 seconds of the appliance being connected to the power supply in the home.

1. Ensure pots have a smooth bottom, otherwise they may scratch the hob's glass ceramic surface. Check dishes.
2. Do not use empty pots on the hob. This could result in damage to both the glass ceramic surface and the bottom of the pots.
3. Never place hot pots or pans on the hob's control panel. This could result in damage.

To activate the demo mode, hold the two external cooking zone selection buttons at the same time for at least 5 seconds: "dE" appears on the central display. You can now explore the control panel functions.
To deactivate Demo mode, repeat the procedure, remembering first of all to disconnect the hob from the mains and then reconnect it, carrying out the procedure within 60 seconds of connection.

Activation/deactivation of the acoustic signal

After switching on the hob, keep the "+" button and outermost selection button on the right ("control panel lock") pressed at the same time for at least 3 seconds

Deactivation of cooking zones Incorrect or missing pot indicator
Select the cooking zone you wish to switch off. If you are using a pot that is not suitable, off. Press the corresponding button (a dot not correctly positioned or not of the correct lights up at the bottom right of the power level indicator). dimensions for your induction hob, a message "no pot" will appear in the display.

Press the key “-” to set the level to “0”. (see figure). If no pot is detected within 60 seconds, the hob switches off.

selection button for 3 seconds. The cook zone switches off and the residual heat indicator "H" lights up.



Control panel lock

Recommended pot bottom widths

This function locks the controls to prevent accidental switching on of the hob.

To activate the control panel lock function hold button D for 3 seconds.

The control panel is locked except for the deactivation function. To deactivate the control panel lock, repeat the activation procedure.

The luminous dot goes off and the hob is active again.

The presence of water, liquid spilled from pots or any objects resting on the button below the symbol can accidentally activate or deactivate the control panel lock function.

Ø	Zone	Ø	Pot
210 mm		150 - 210 mm	
180 mm		120 - 180 mm	
145 mm		100 - 145 mm	

Control panel warnings

Residual heat indicator.

The hob is fitted with a residual heat indicator for each cooking zone. These indicators alert the user when cooking zones are still hot.

If the display shows H, the cooking zone is still hot. If the residual heat indicator of a given cooking zone is lit, that zone can be used, for example, to keep a dish warm or to melt butter.

When the cooking zone cools down, the display goes off.

Maintenance and cleaning

Clean the hob after each use in order to avoid damaging the surface and to prevent the formation of baked-on deposits which are difficult to remove. Before cleaning, make sure the cooking zones are switched off and that the residual heat indicator ("H") is not displayed.



Steam cleaner is not to be used!

Periodically check for dust under the appliance, near the cooling air inlet or the outlet openings.

This could hinder the ventilation and cooling of the electronic module and decrease the effectiveness of the hob.

To clean the hob, proceed as follows:

1. use a soft clean cloth, absorbent kitchen wipes or a proprietary cleaner for glass

ceramic hobs. Do not use abrasive sponges and/or metal scouring pads.

Food spills should be cleaned off before they bake onto the glass ceramic surface. Sugar and foods with a high sugar content damage the glass ceramic surface and must be immediately removed using a scraper for glass.

Caution! Glass scrapers have a very sharp blade and must be handled with care.

Remove any stubborn food residues with a scraper or proprietary detergents.

4. Salt, sugar and sand can scratch the glass ceramic hob: clean up any such spills on the hob immediately.

What to do if ...

Error code	Problem	Possible cause	Solution
The hob switches off and after 10 seconds emits an acoustic signal every 3 seconds	Continuous pressure on control panel area	Water or utensils on control panel	Clean the control panel
C81, C82	The control panel switches off because of excessively high temperatures	The internal temperature of electronic parts is too high	Wait for the hob to cool down before using it again
C83	The control panel indicates the error code hob off because of an issue on electronic circuit	Cooktop has been supplied with over voltage	Cooktop may be still used but call the Authorized Service Centre
C85	Hob is not able to give power to the pot	Pot is not suitable to the induction hob	Use another induction pot
F02 or F04 or C84	The connection voltage is wrong or issue to the power supply	The sensor detects a discrepancy between the appliance voltage and that of the mains supply	Disconnect the hob from the mains and check the electrical connection
F42 or F43	The connection voltage is wrong	The sensor detects a discrepancy between the appliance voltage and that of the mains supply	Disconnect the hob from the mains and check the electrical connection
F01, F05, F06, F07, F10, F12, F25, F33, F34, F36, F37, F46, F47, F48, F49, F58, F61, F62, F63, F72, F74, F77	Call the Authorized Service Centre and specify the error code		